


SQV SERIES PARTS LIST

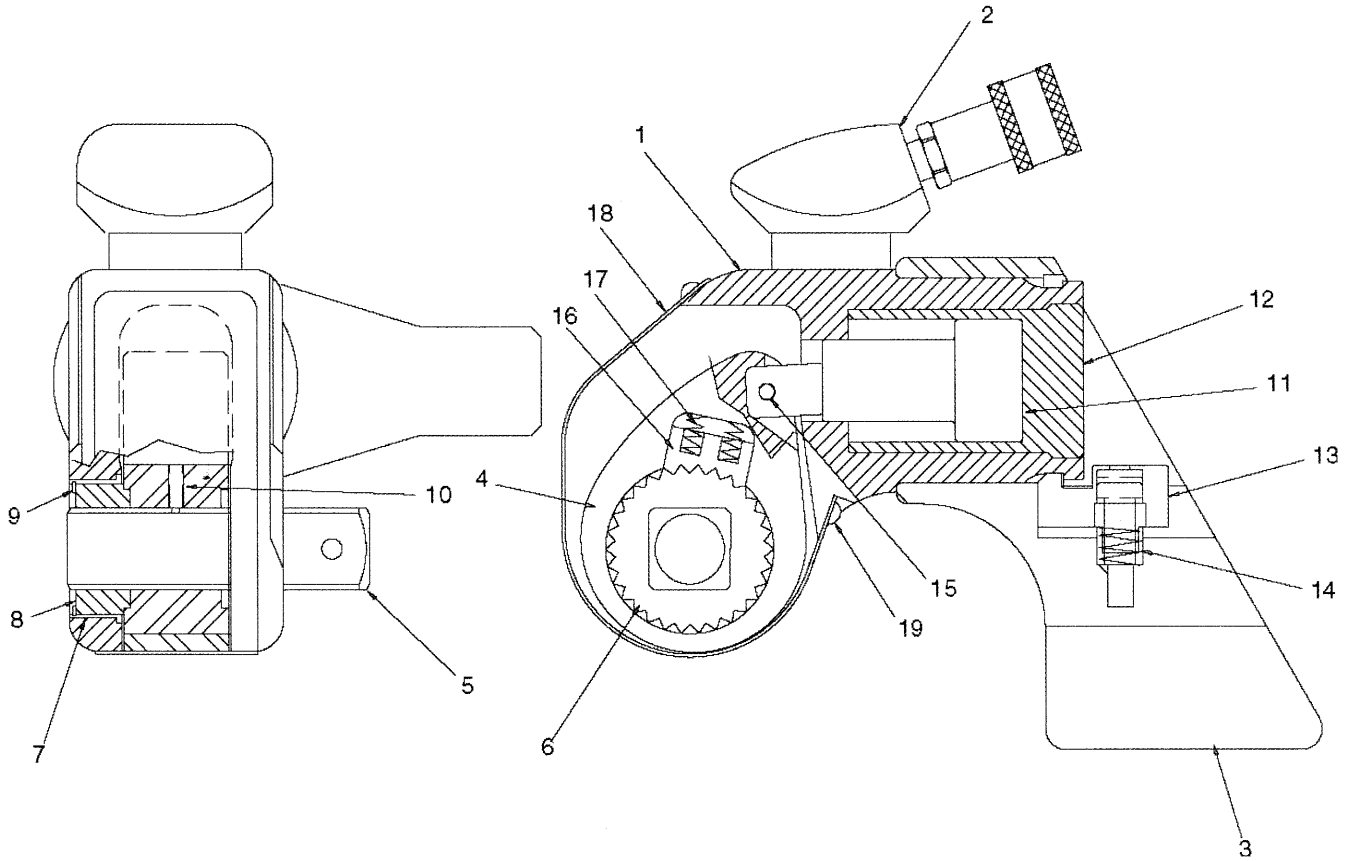

Item No.	Description	SQV06 3/4" Drive	SQV2 3/4" Drive	SQV4 1" Drive	SQV8 1-1/2" Drive	SQV12 1-1/2" Drive
1	Housing	SQV-P6-01	SQV-02-01	SQV-04-01	SQV-08-01	SQV-12-01
2	Uniswivel Assembly	SQV-01-00	SQV-01-00	SQV-001-00	SQV-001-00	SQV-001-00
3	Reaction Arm	SQV-P6-03	SQV-02-03	SQV-04-03	SQV-08-03	SQV-12-03
4	Drive Plate	SQV-P6-04	SQV-02-04	SQV-04-04	SQV-08-04	SQV-12-04
5	Square Drive	SQV-P6-05	SQV-02-05	SQV-04-05	SQV-08-05	SQV-12-05
6	Ratchet	SQV-P6-06	SQV-02-06	SQV-04-06	SQV-08-06	SQV-12-06
7	Bushing	SQV-P6-07	SQV-02-07	SQV-04-07	SQV-08-07	SQV-12-07
8	Drive Sleeve Square	SQV-P6-08	SQV-02-08	SQV-04-08	SQV-08-08	SQV-12-08
9	Retaining Ring	SQV-P6-30	SQV-02-30	SQV-04-30	SQV-08-30	SQV-12-30
10	Set Screw, Ratchet	SQV-P6-09	SQV-02-09	SQV-04-09	SQV-08-09	SQV-12-09
11	Piston Rod Assembly	SQV-P6-61	SQV-02-61	SQV-04-61	SQV-08-61	SQV-12-61
12	End Cap Sleeve	SQV-P6-26	SQV-02-26	SQV-04-26	SQV-08-26	SQV-12-26
13	Reaction Arm Clamp Assembly	SQV-P6-28	SQV-02-28	SQV-04-28	SQV-08-28	SQV-12-28
14	Clamp Spring	SQV-P6-38	SQV-02-38	SQV-04-38	SQV-08-38	SQV-12-38
15	Roll Pin/Drive Plate	SQV-P6-17	SQV-02-17	SQV-04-17	SQV-08-17	SQV-12-17
16	Drive Pawl	SQV-P6-60	SQV-02-60	SQV-04-60	SQV-08-60	SQV-12-60
17	Drive Pawl Spring	SQV-P6-27	SQV-02-27	SQV-04-27	SQV-08-27	SQV-12-27
18	Shroud	SQV-P6-31	SQV-02-31	SQV-04-31	SQV-08-31	SQV-12-31
19	Shroud Screw	SQV-P6-32	SQV-02-32	SQV-04-32	SQV-08-32	SQV-12-32