


Y SERIES PARTS LIST

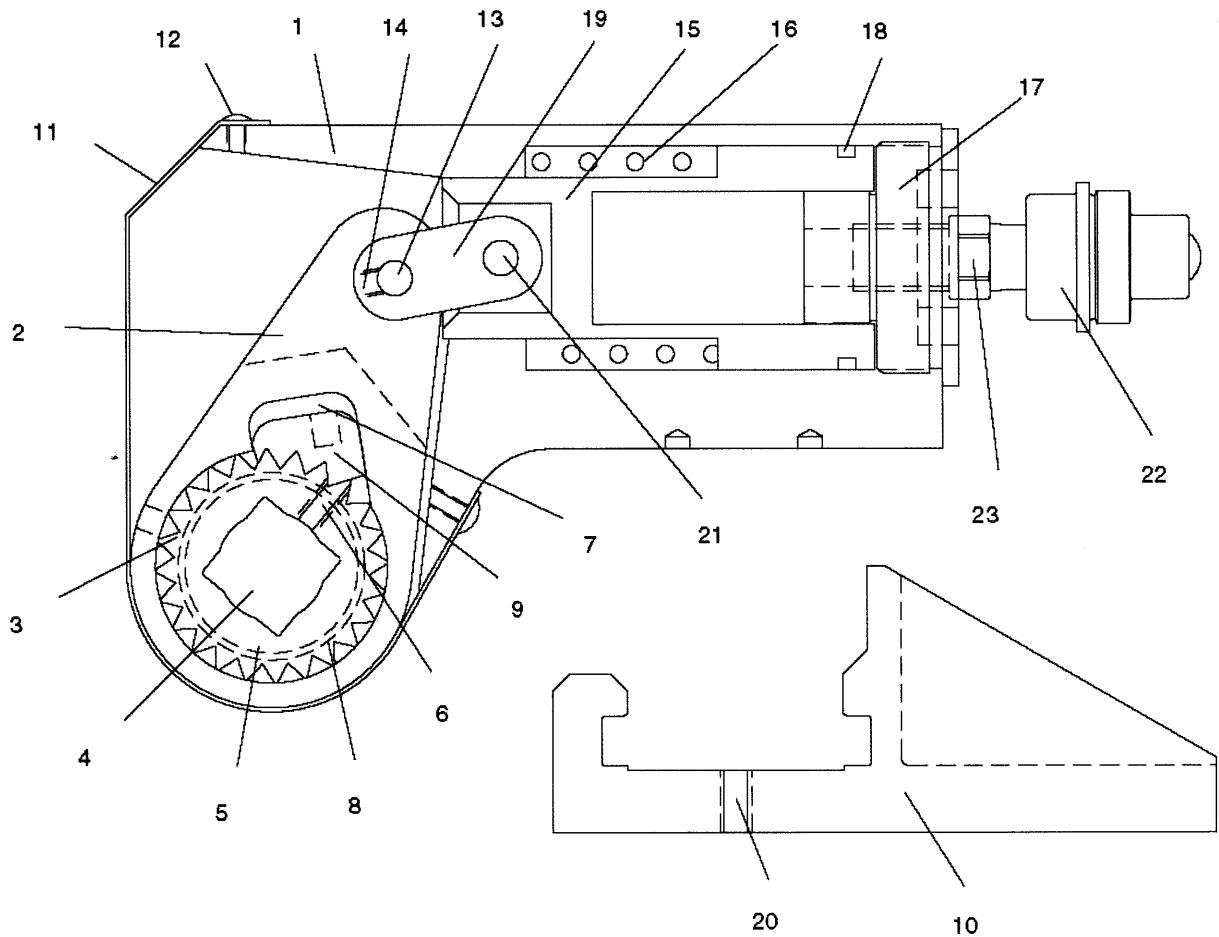

Item No.	Description	Y1	Y3	Y5	Y8	Y10
1	Housing	Y1-01	Y1-01	Y5-01	Y8-01	Y10-01
2	Drive Plate	Y1-03	Y3-03	Y5-03	Y8-03	Y10-03
3	Ratchet	Y1-10	Y3-10	Y5-10	Y8-10	Y10-10
4	Square Drive	Y1-11	Y3-11	Y5-11	Y8-11	Y10-11
5	Sleeve (2 Rod)	Y1-12	Y3-12	Y5-12	Y8-12	Y10-12
6	Set Screw- Ratchet	Y1-13	Y3-13	Y5-13	Y8-13	Y10-13
7	Spring - Drive Segment	Y1-14	Y3-14	Y5-14	Y8-14	Y10-14
8	O-Ring - Sleeves	Y1-15	Y3-15	Y5-15	Y8-15	Y10-15
9	Drive Segment	Y1-20	Y3-20	Y5-20	Y8-20	Y10-20
10	Reaction Arm	Y1-30	Y3-30	Y5-30	Y8-30	Y10-30
11	Shroud	Y1-35	Y3-35	Y5-35	Y8-35	Y10-35
12	Shroud Screw	Y1-36	Y3-36	Y5-36	Y8-36	Y10-36
13	Drive Pin	Y1-38	Y3-38	Y5-38	Y8-38	Y10-38
14	Set Screw - Rod End	Y1-39	Y3-39	Y5-39	Y8-39	Y10-39
15	Cylinder Rod	Y1-51	Y3-51	Y5-51	Y8-51	Y10-51
16	Return Spring	Y1-52	Y3-52	Y5-52	Y8-52	Y10-52
17	Piston End Cap	Y1-53	Y3-53	Y5-53	Y8-53	Y10-531
18	O-Ring - Piston Endcap	Y1-54	Y3-54	Y5-54	Y8-54	Y10-54
19	Rod End	Y1-61	Y3-61	Y5-61	Y8-61	Y10-61
20	Set Screw - Reaction Arm	Y1-62	Y3-62	Y5-62	Y8-62	Y10-62
21	Roll Pin Rod End	Y1-63	Y3-63	Y5-63	Y8-63	Y10-63
22	Male Coupler	090155	090155	090155	090155	090155
23	Hex Nipple	090101	090101	090101	090101	090101